







# GRANDIO SUMMIT SHADE NET INSTALLATION

## ALUMINET SHADE NET PARTS LIST FOR GRANDIO SUMMIT GREENHOUSES

Image	Part Name	12' x 8' Greenhouse	12' x 12' Greenhouse	12' x 16' Greenhouse	12' x 20' Greenhouse	12' x 24' Greenhouse	12' x 28' Greenhouse	12' x 32' Greenhouse
	<b>Shade Net</b> 50% ALUMINET SHADE NET	<b>21' x 9'</b>	<b>21" x 13'</b>	<b>21' x 17'</b>	(1) 12' x 8' kit and (1) 12' x 12' kit	(2) 12' x 12' kits	(1) 12' x 12' kit and (1) 12' x 16' kit	(2) 12' x 16' kits
	<b>AFS-620</b> ALLEN FLANGED HEAD M6-100X20MM	<b>10</b>	<b>14</b>	<b>16</b>				
	<b>M6*10*3 Square Nut</b>	<b>10</b>	<b>14</b>	<b>16</b>				
	<b>ML01 Flanged Nut</b> M6 FLANGED NUT	<b>10</b>	<b>14</b>	<b>16</b>				
	<b>#10 Ball Bearing</b>	<b>10</b>	<b>14</b>	<b>16</b>				
	<b>Rope</b>	<b>50'</b>	<b>100'</b>	<b>100'</b>				

# GRANDIO SUMMIT SHADE NET INSTALLATION

**NOTE:** Install your shade net on a calm day. It will require 2 people for installation.

1. Close all roof vents completely before beginning the installation of your shade net.
2. Install all of the anchoring hardware as shown in **A**, **B**, **C** and **D**. You will insert the **SQUARE NUT** into the **12 TRACK** that runs along the bottom edge of you Grandio Summit Flat Mount Base Kit, then prop the **SQUARE NUT** upright to accept the pre threaded **AFS-620** screw with the flanged **ML01 NUT**. Screw into the **SQUARE NUT** then tighten the **ML01 NUT** down. The set should look like diagram **D** when installed.

Space out the hardware as desired for your greenhouse. Note the number of grommets to each side of the shade net according to the size you are installing so you space the hardware appropriately.



**A**



**B**



**C**





**D**




# GRANDIO SUMMIT SHADE NET INSTALLATION

3. Place the shade net in front of your Greenhouse. The front of the shade net measures **21'**, fold the shade net in an accordion fashion for the easiest installation see **A**. If you are installing multiple shade nets on a longer greenhouse model you may want to attach the shade nets in the middle with zip ties to hold the 21' edges together, or just thread the paracord thru all of the bottom edge grommets on the shade nets.
4. With the help of another person, lift the folded shade net and place it over the front of your greenhouse, then gently roll out across the entire greenhouse.
5. Open all Roof Vents, then use rope to tie the shade net down weaving from the grommets to the bolts as shown in **B**. For **1** tie a regular square knot, then at **7** tie the taut line knot, see **C**.


**NOTE:** Remove your shade net during seasons when not needed and store in a dry place.

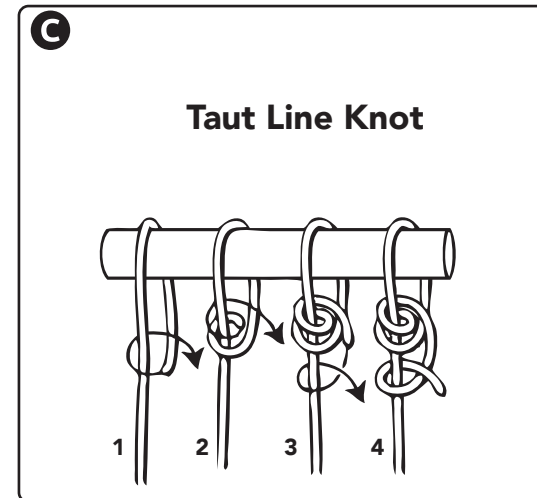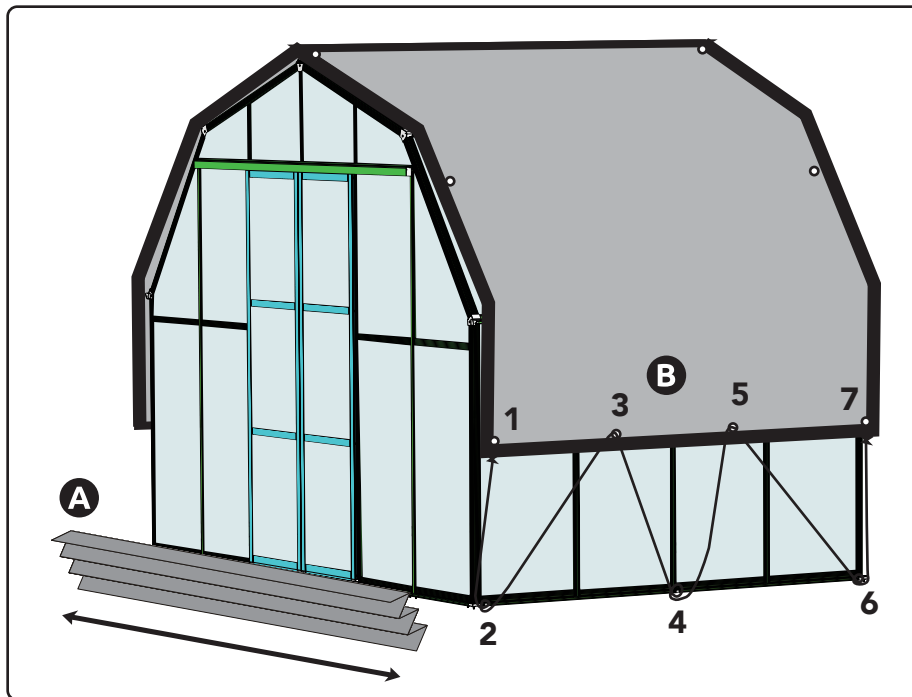

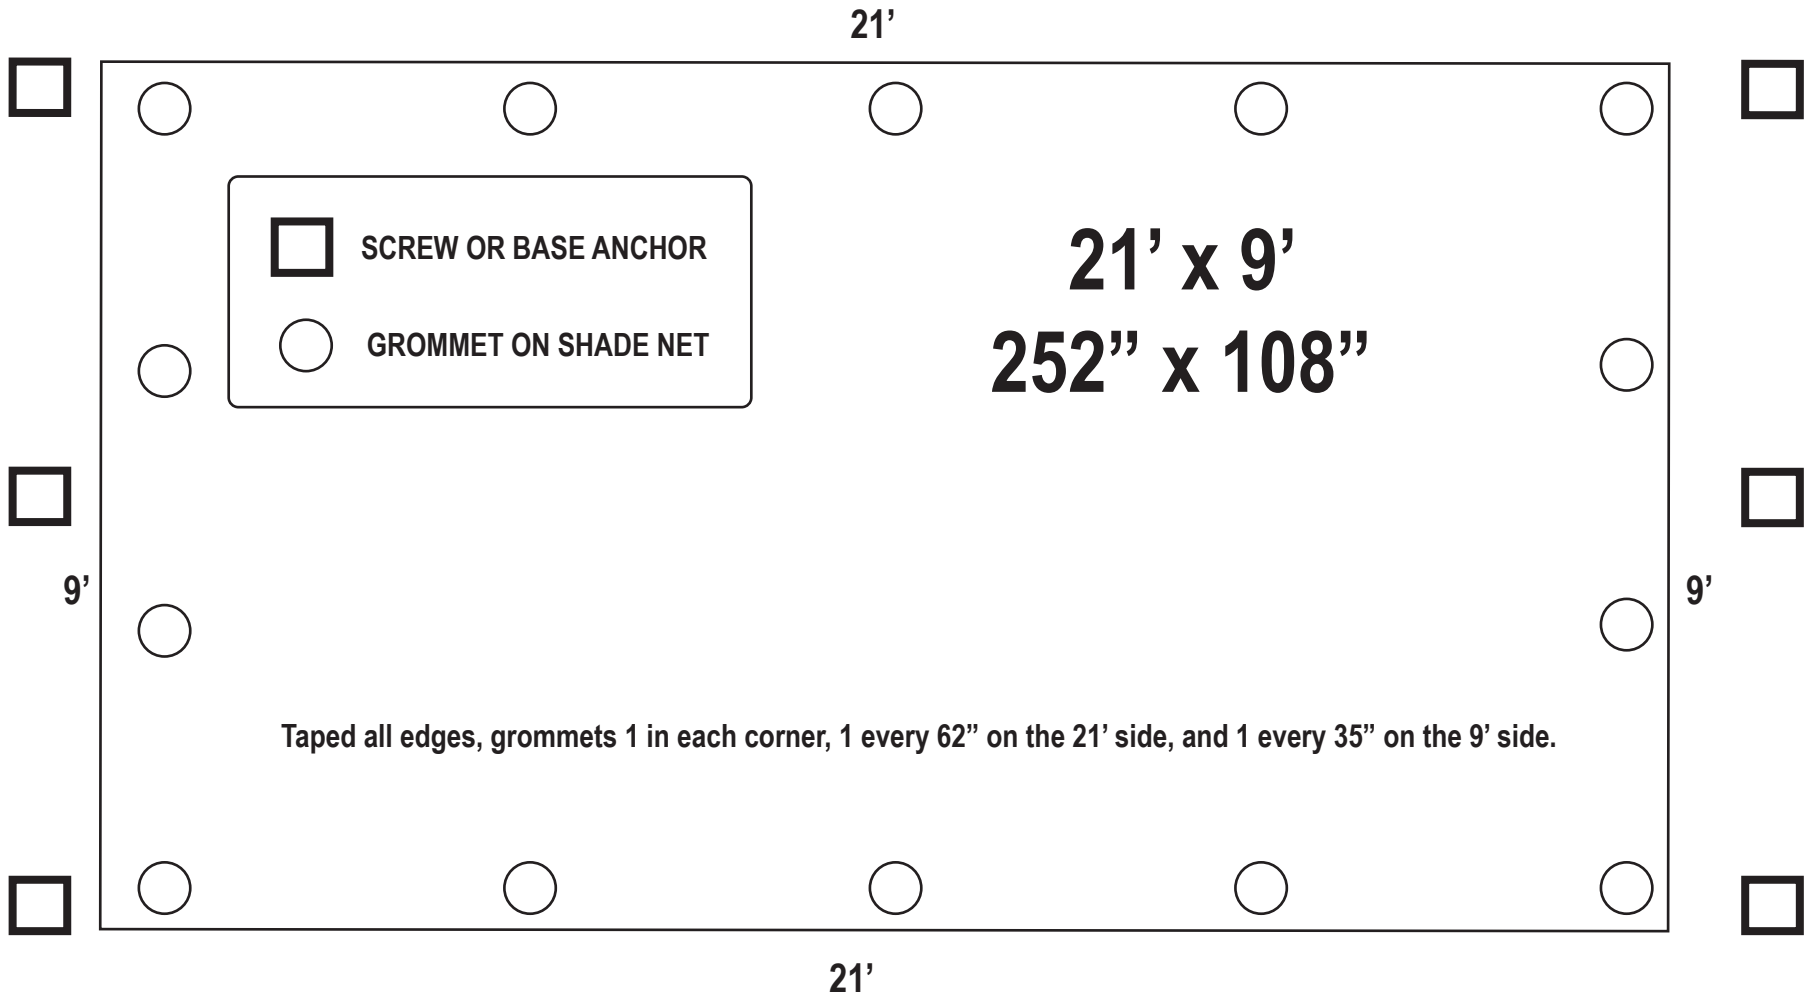


21'



 SCREW OR BASE ANCHOR

 GROMMET ON SHADE NET

**21' x 9'**  
**252" x 108"**



9'




9'


Taped all edges, grommets 1 in each corner, 1 every 62" on the 21' side, and 1 every 35" on the 9' side.



21'



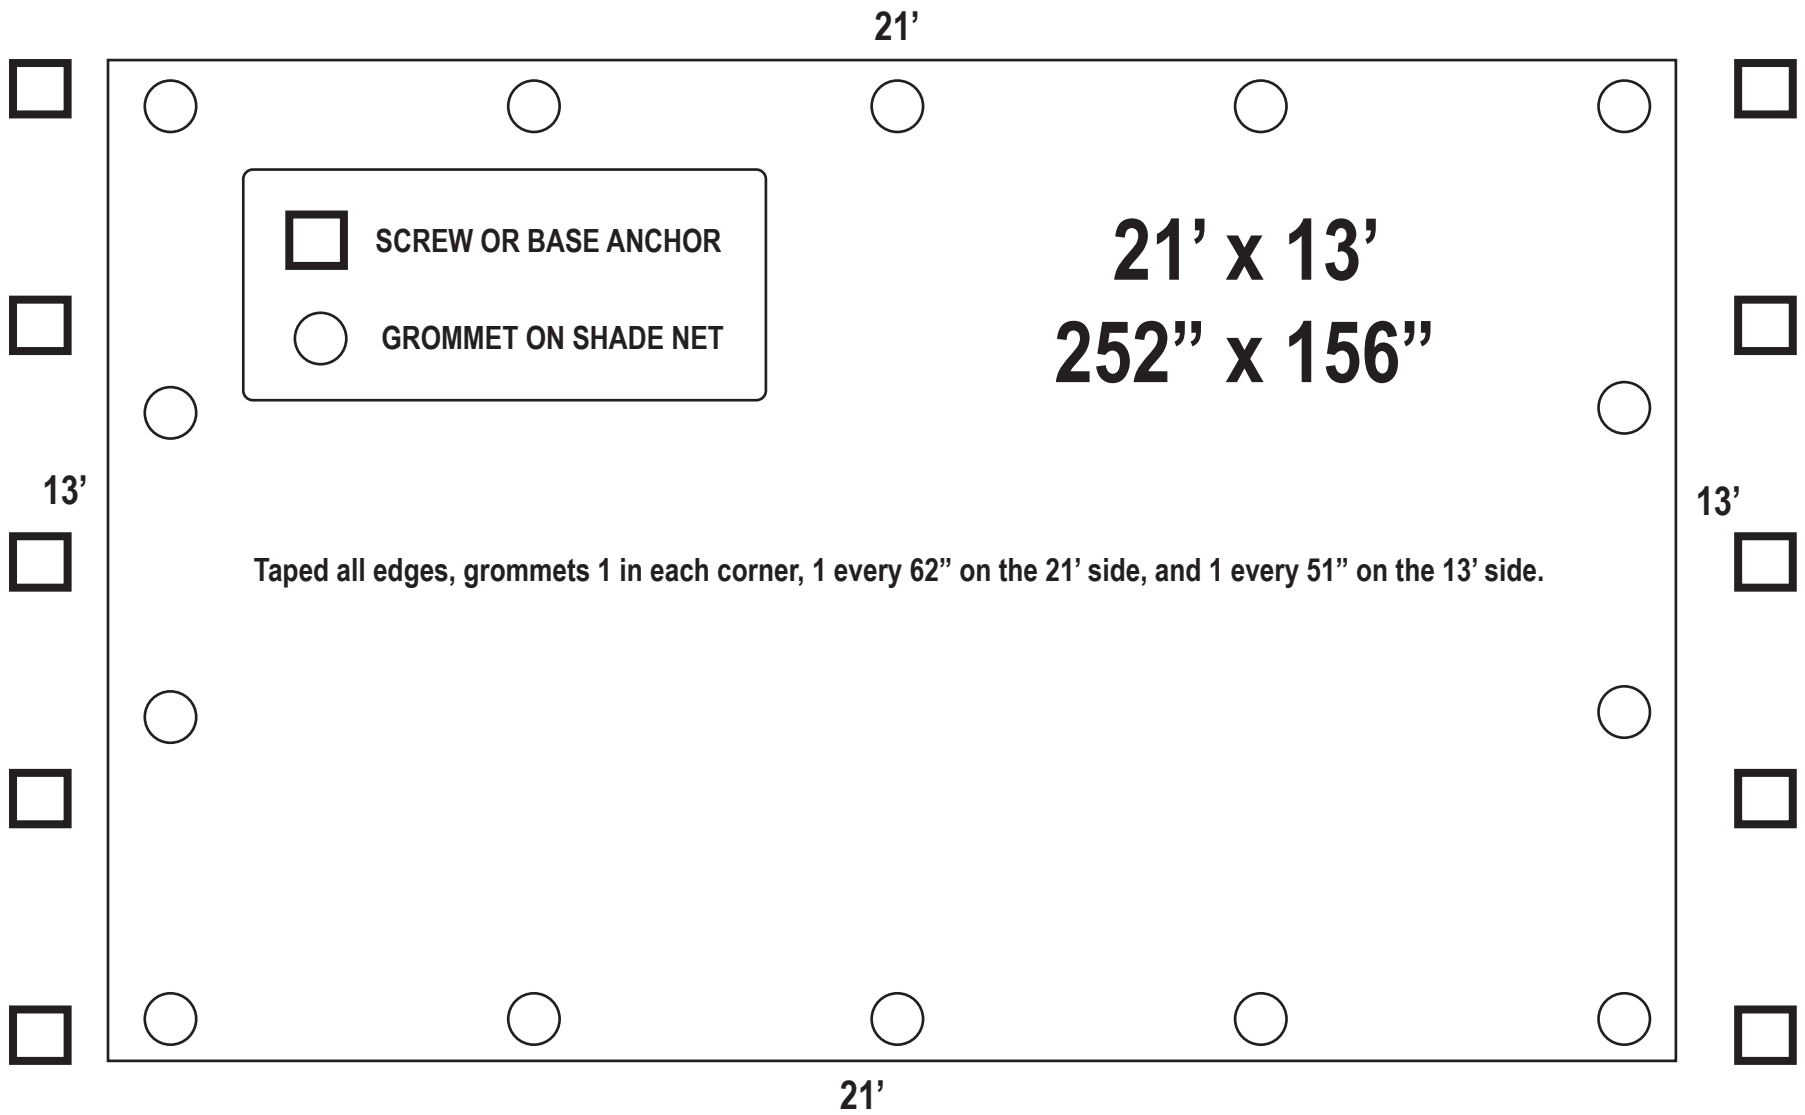

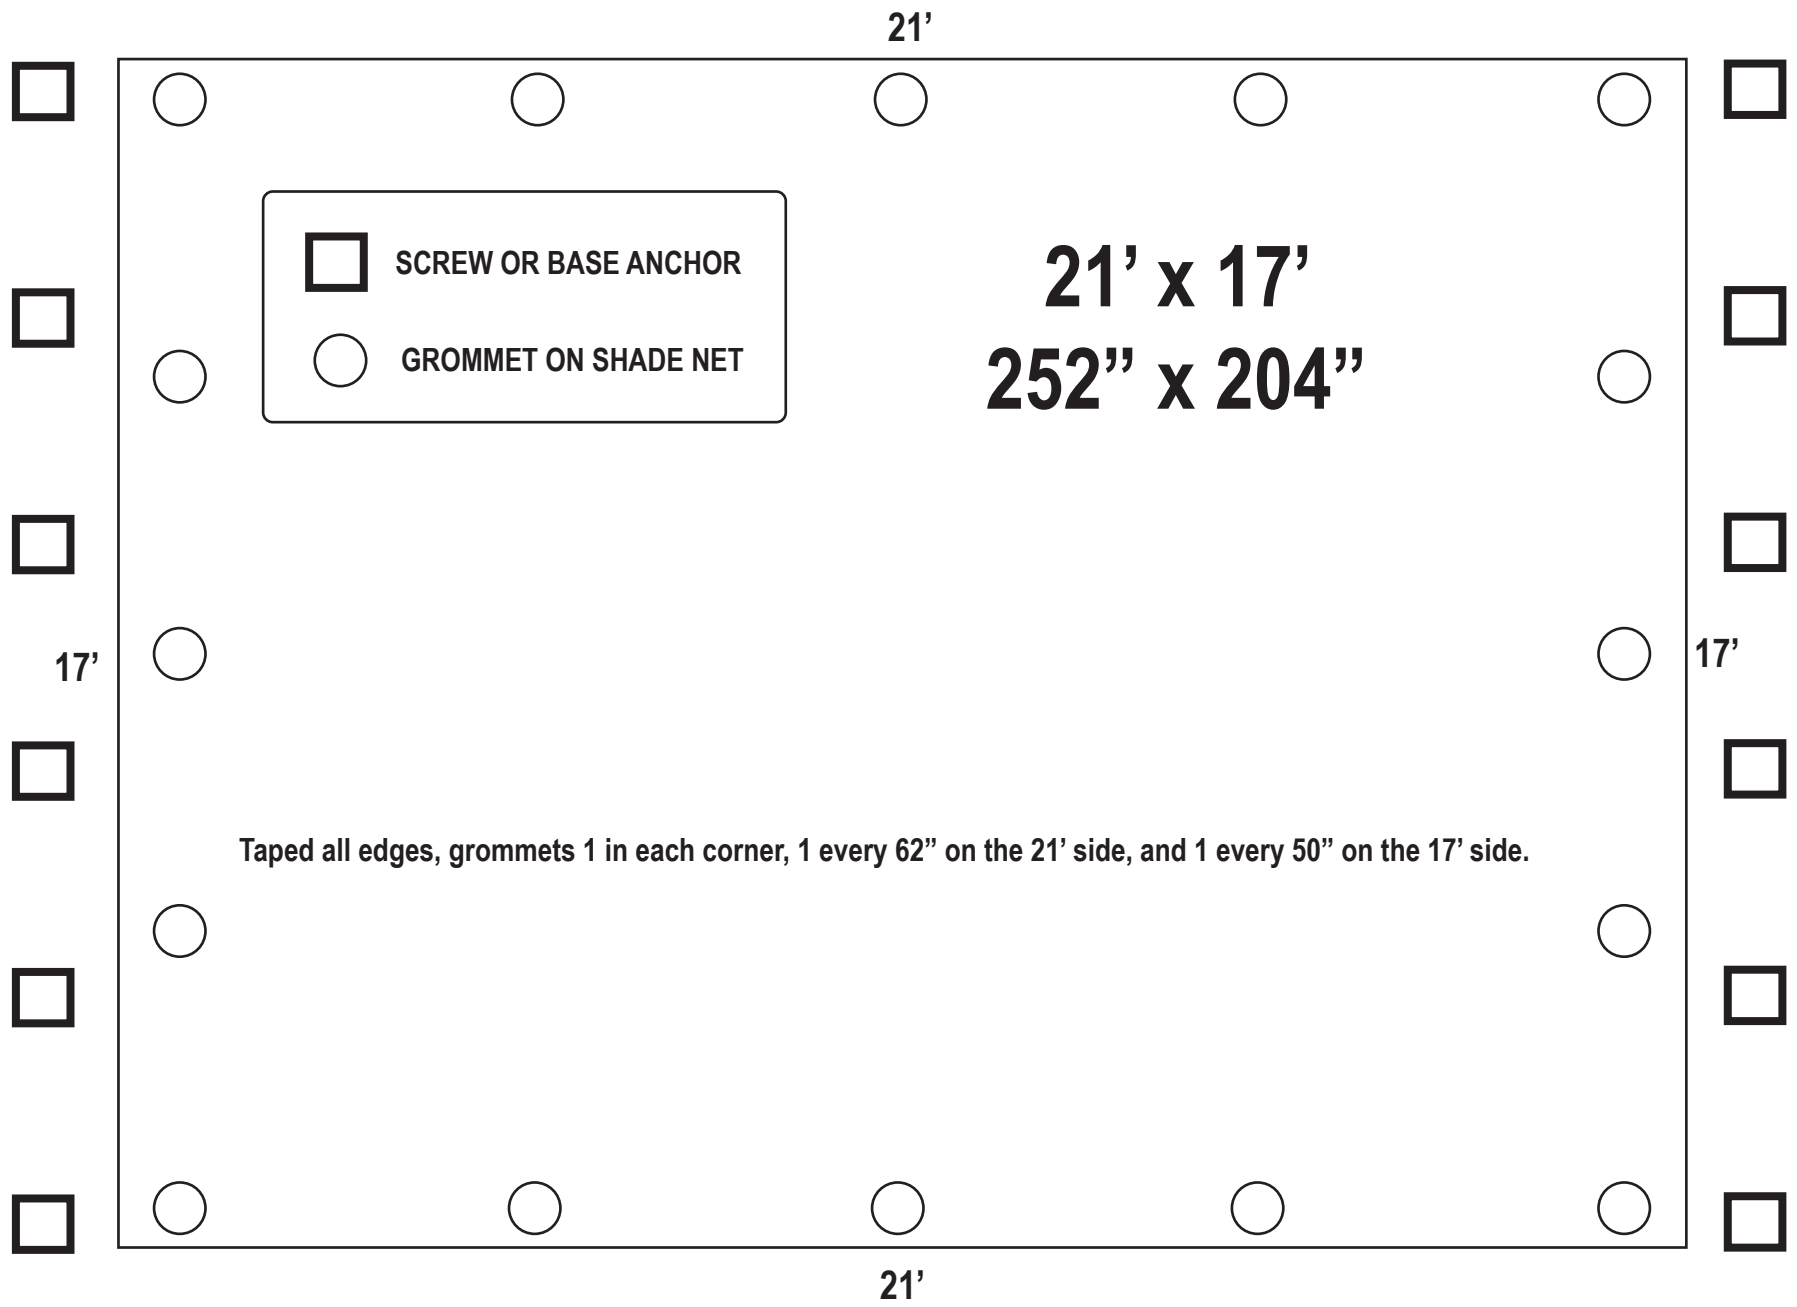

21'

☐ SCREW OR BASE ANCHOR

○ GROMMET ON SHADE NET

**21' x 17'**  
**252" x 204"**

17'

17'

Taped all edges, grommets 1 in each corner, 1 every 62" on the 21' side, and 1 every 50" on the 17' side.

21'